




# Samsung Galaxy S5 Display Assembly Replacement

Replace the Display Assembly in your Samsung Galaxy S5.

Written By: Sam Lionheart

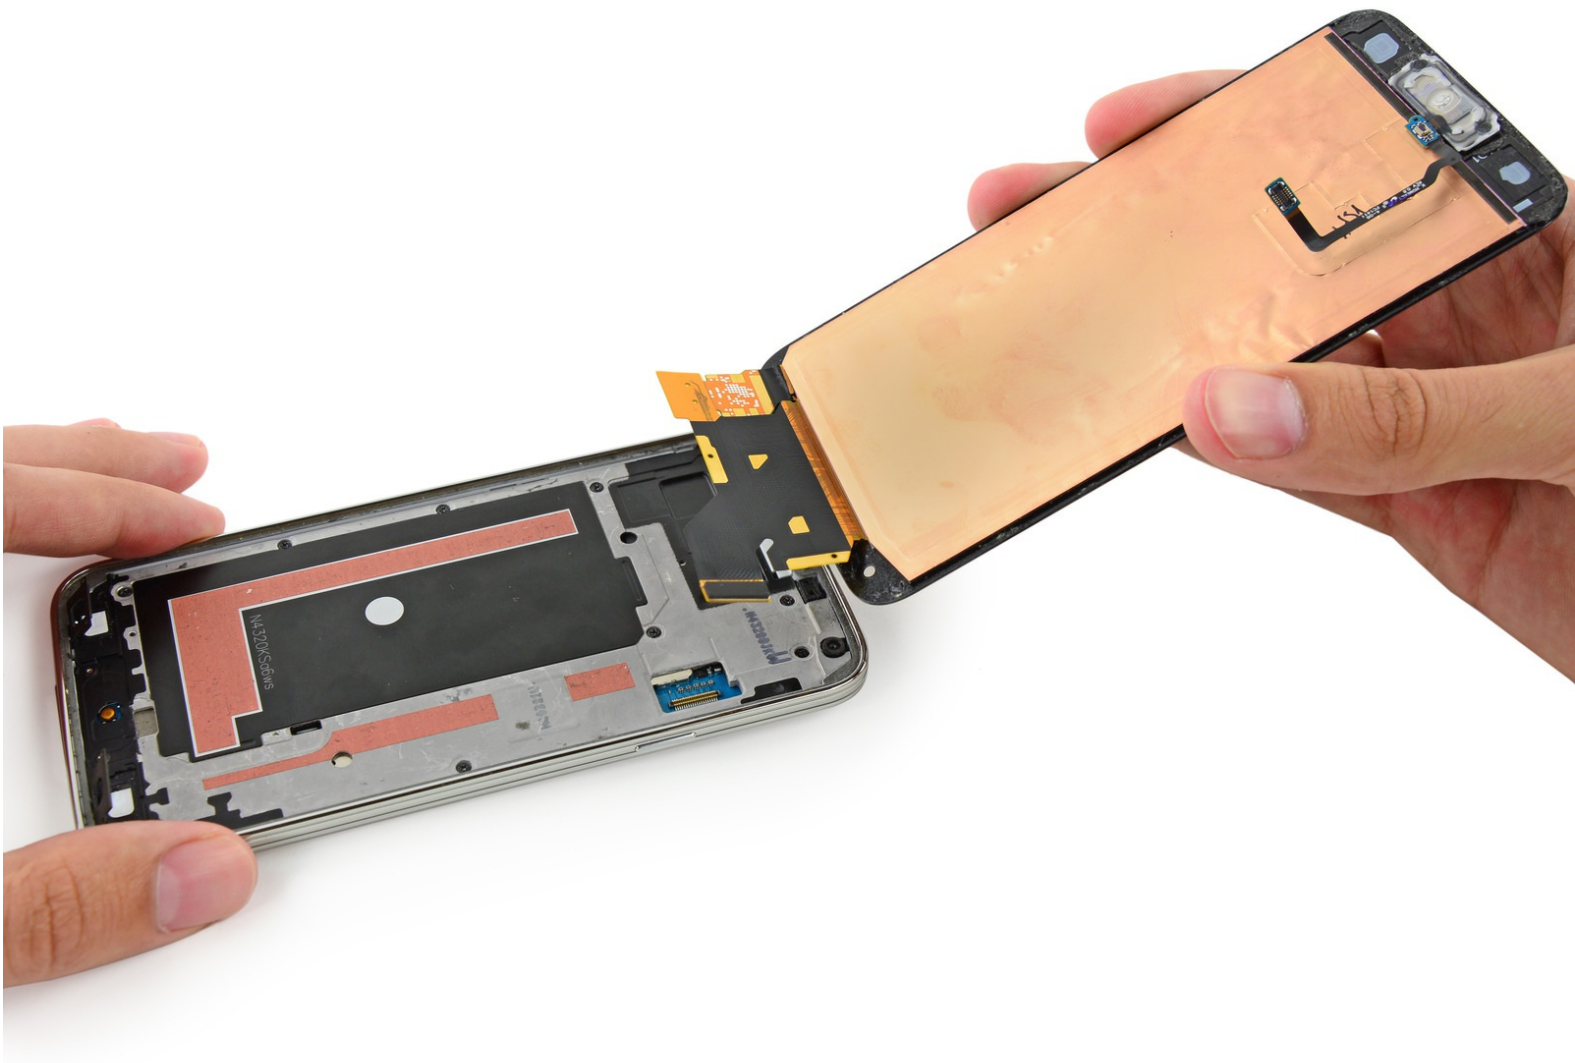

## INTRODUCTION

Use this guide to replace the display assembly, which includes the front glass, digitizer, and home button cable.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [iOpener](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Galaxy S5 LCD Screen and Digitizer](#) (1)
- [Galaxy S5 Aftermarket LCD Screen and Digitizer](#) (1)
- [Galaxy S5 Home Button and Cable Assembly](#) (1)
- [NuGlas Tempered Glass Screen Protector for Galaxy S5](#) (1)
- [Galaxy S5 Touch Screen Adhesive](#) (1)

## Step 1 — Rear Case




- Insert a fingernail or plastic opening tool into the divot to the left of the rear-facing camera.
- Gently pry and twist the flexible rear cover off the back of the phone.

## Step 2 — Battery



- Insert a fingernail or plastic opening tool into the recess in the bottom right corner of the battery and lift upward.
- Remove the battery away from the phone.

### Step 3 — microSD Card

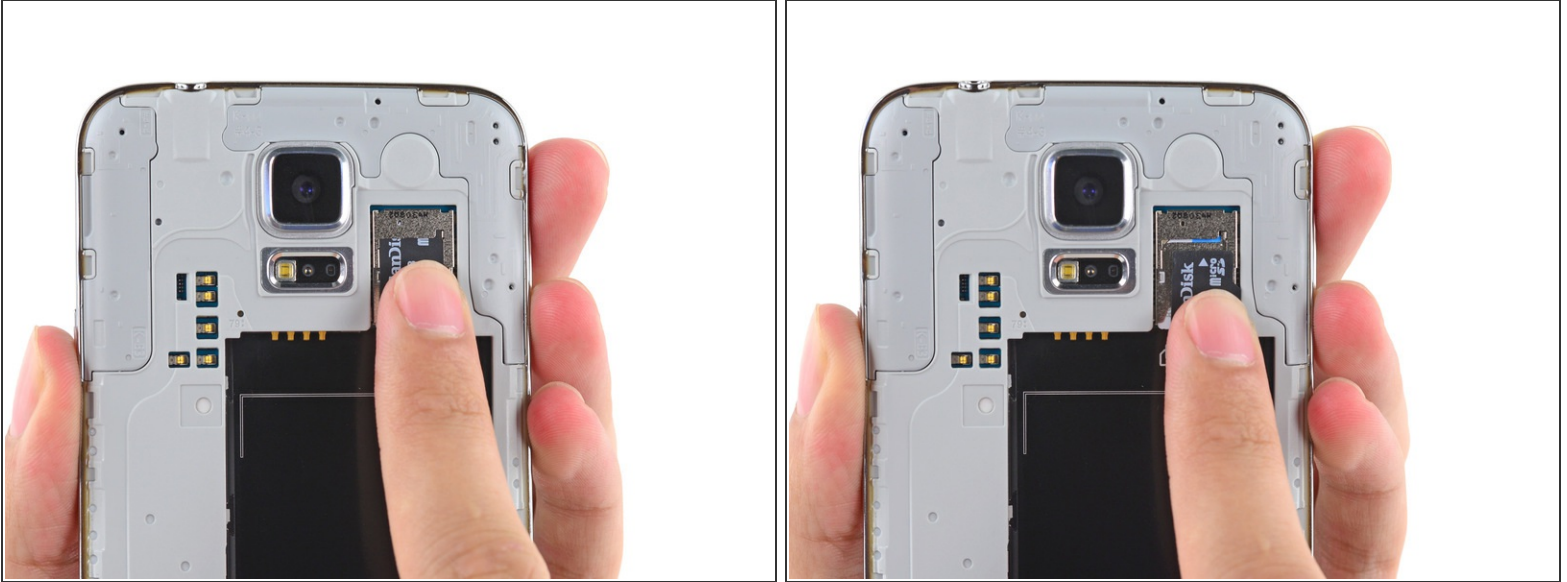

- Using a fingertip, pull the microSD card straight down out of its slot.
- Remove the microSD card from the phone.

### Step 4 — SIM Card



- Repeat the above procedure to remove the SIM card.



## Step 5 — Display Assembly



- Use a plastic opening tool to pry up the plastic midframe connector panel.
  - Remove the connector panel with a pair of tweezers.
- ☑ There should be enough adhesive to readhere the panel upon reassembly, otherwise use a small amount of double-stick tape.

## Step 6



- Use the sharp tip of a spudger to pry the home button cable connector straight up off its socket.


## Step 7



**i** In the following steps you will be using an iOpener to warm the adhesive affixing the display assembly to the rest of the phone. This will allow for a safer, easier screen removal. For proper iOpener use, follow our [iOpener heating guide](#), make sure to pay attention to all warnings.

- Place a heated iOpener on the left side of the phone for at least 90 seconds.
- Reheat the iOpener and place it on the right half of the phone.


## Step 8

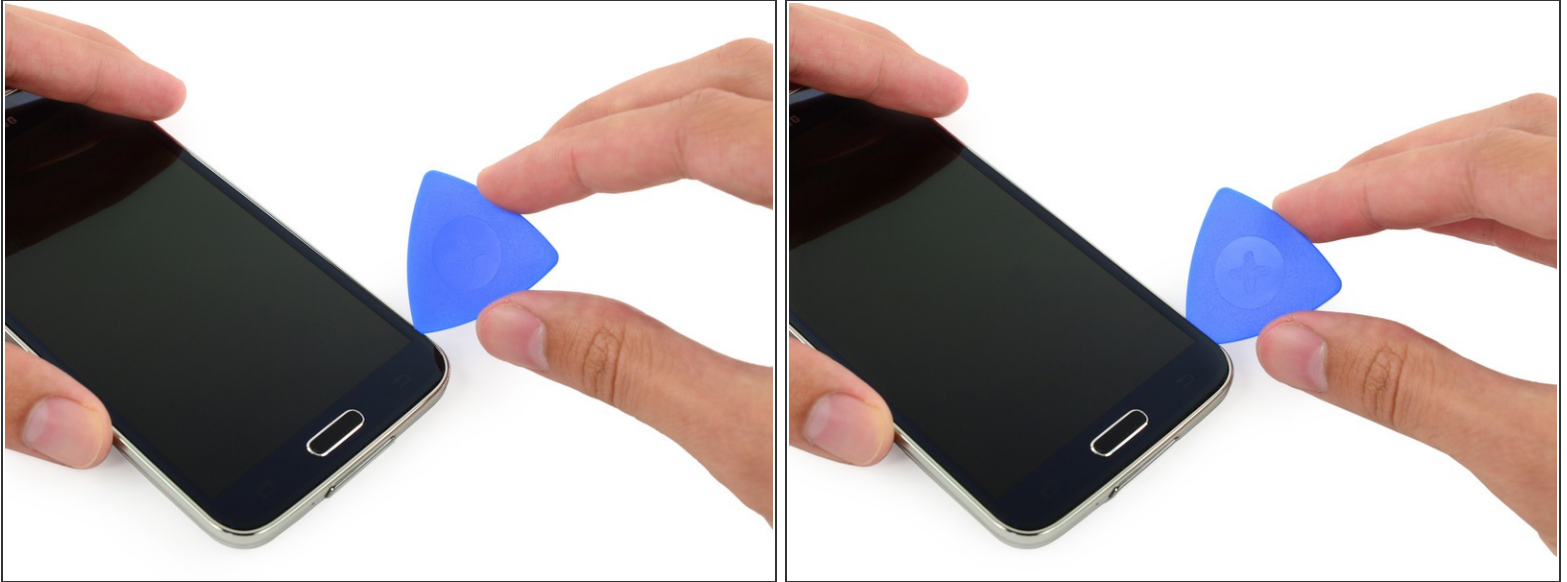

**i** In the following steps you will be using an opening pick to separate the adhesive securing the front panel glass. Only pry where directed. If you experience resistance, stop sliding the opening pick and reapply heat.

- Insert the edge of an opening pick underneath the bottom right side of the front glass.

## Step 9

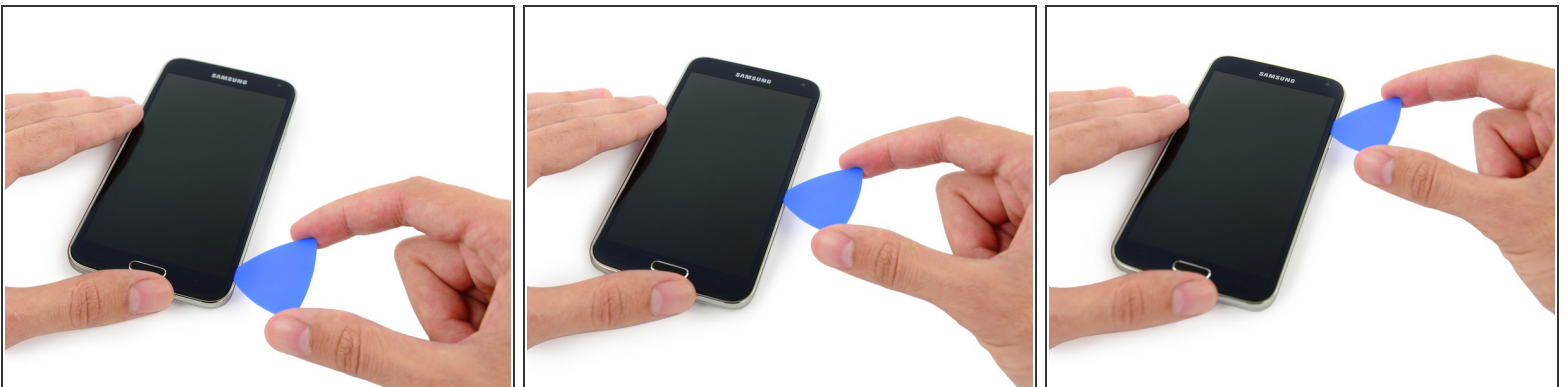


- Slide the opening pick up along the right side of the display.

## Step 10



- Carefully slide the pick around the corner, stopping before the speaker grille at the top of the phone.


## Step 11

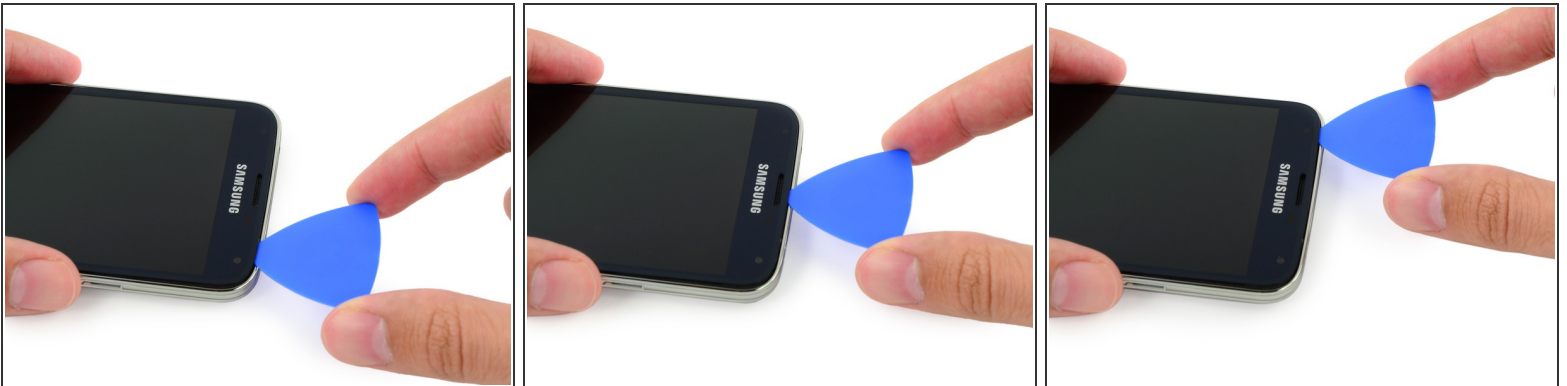

- ⓘ The adhesive securing the top of the phone is only a narrow strip above the earpiece speaker. Slide the pick along the top of the speaker to avoid damaging internal components.
- Slide the opening pick across the top of the phone, being very careful **not** to insert the pick too deeply.



## Step 12

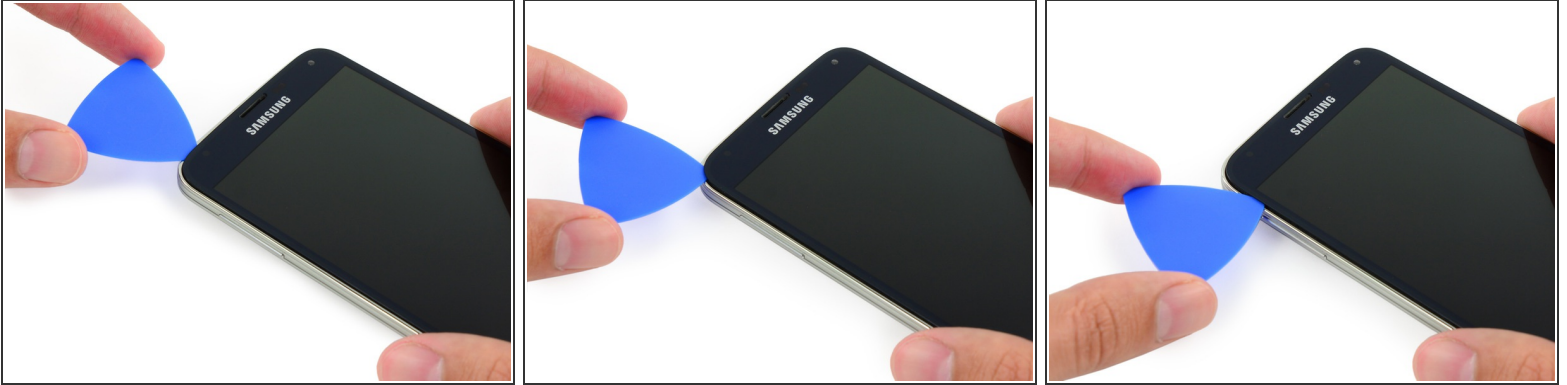

- Carefully slide the pick around the upper left corner.


⚠ If you encounter any resistance from cooling adhesive, reapply a heated iOpener to the left side of the phone.

## Step 13



- Slide the opening pick down along the left half of the phone stopping at the lower left corner.

## Step 14

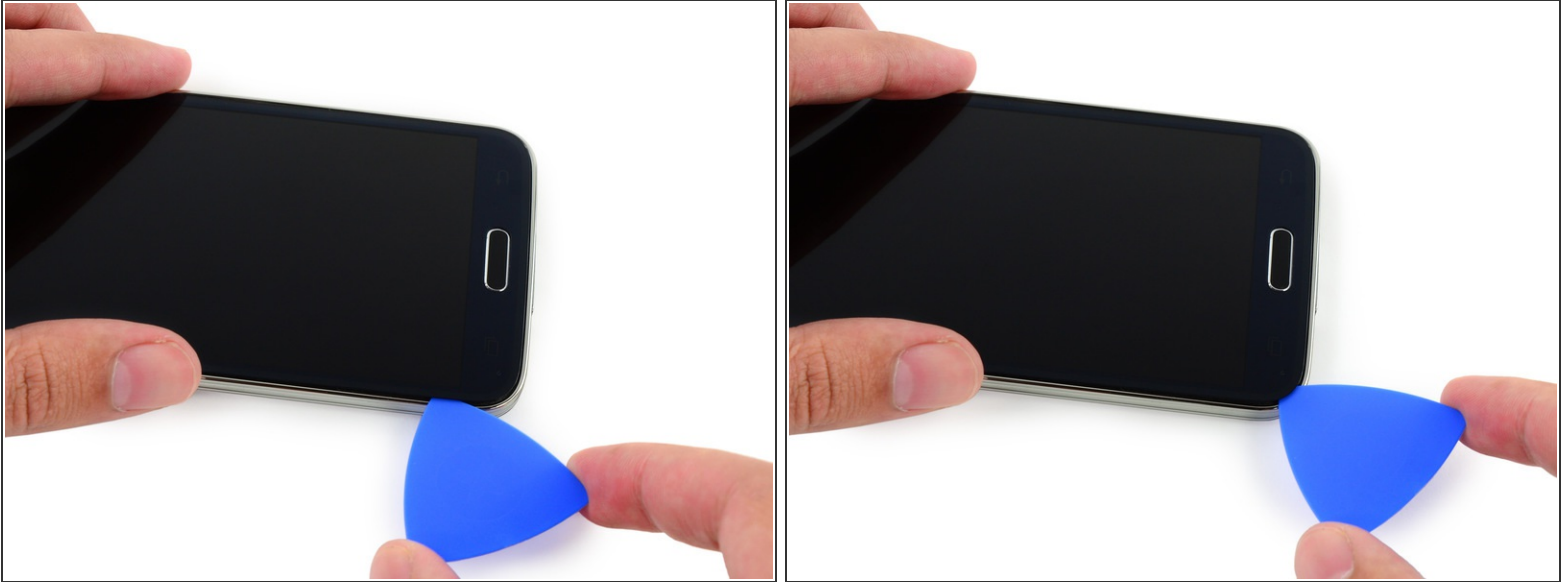


- Slide the opening pick all the way to the bottom left corner of the phone, making sure it is securely placed.
- ⓘ In the following step you will be placing an iOpener over the home button end of the phone, you won't want your opening pick to slip out.


## Step 15




- Place a reheated iOpener over the bottom portion of the display assembly.
- ⓘ There are delicate components in this portion of the phone, you want to ensure the adhesive is warm and easy to loosen to protect the phone.

## Step 16

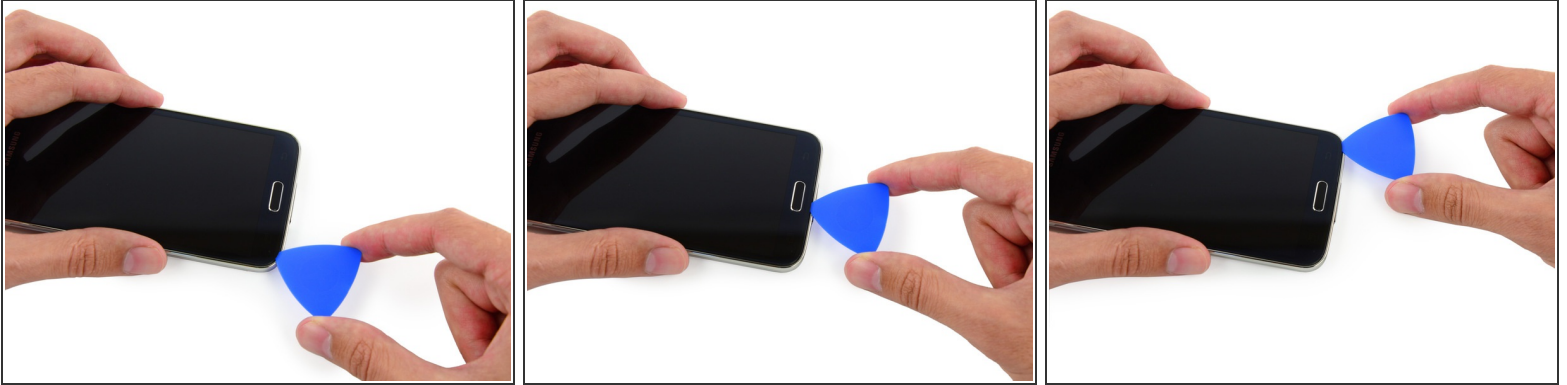


-  The bottom end of the phone contains the soft button and home button ribbon cables. If you insert the opening pick too far into the phone you risk cutting these cables.
- Slide the very end of the opening pick across the bottom edge of the display to separate the last of the remaining adhesive.

## Step 17

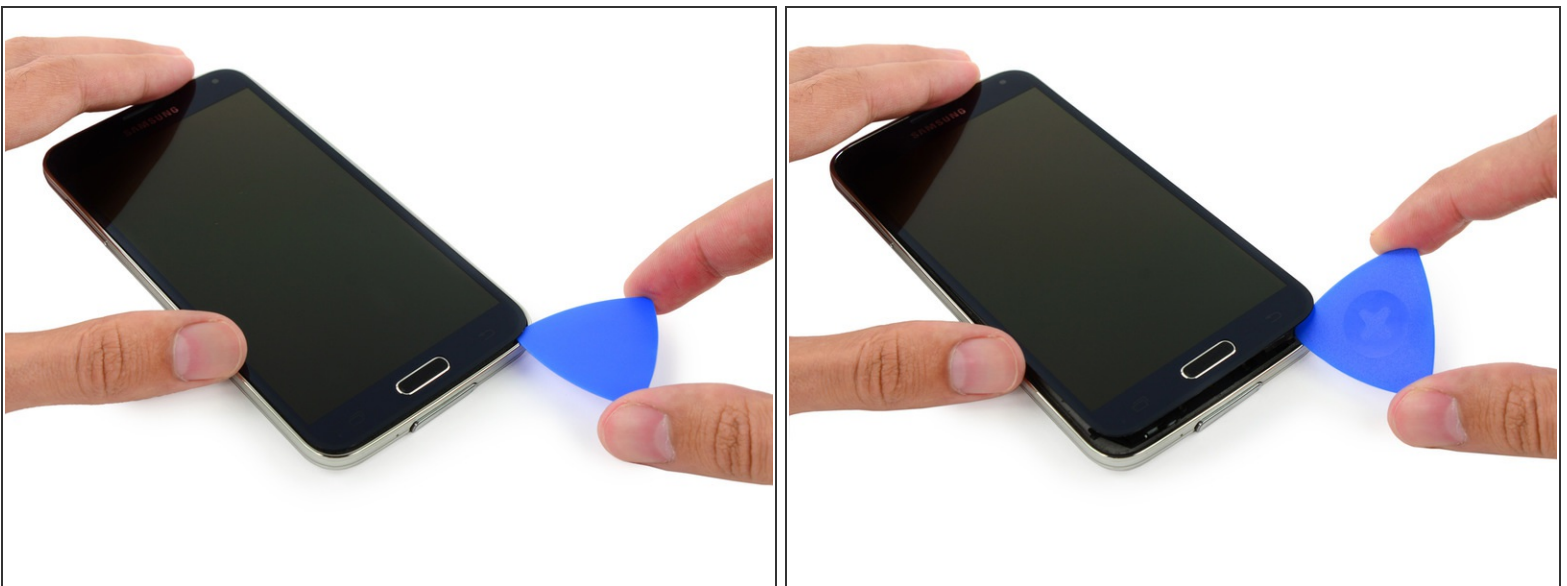

- Twist the opening pick to detach the glass from the phone.

 If the front panel does not detach easily, it may require additional adhesive cutting.


## Step 18



- ⓘ If the front panel is not easily freed, the adhesive on the soft button cable may need to be separated.
- ⚠ These cables are thin and easily damaged, therefore be certain you are only peeling them off the display assembly and not lacerating them.
- Insert an opening pick under the soft button icons on the display and pry the button cables down off the inside of the front panel.



## Step 19

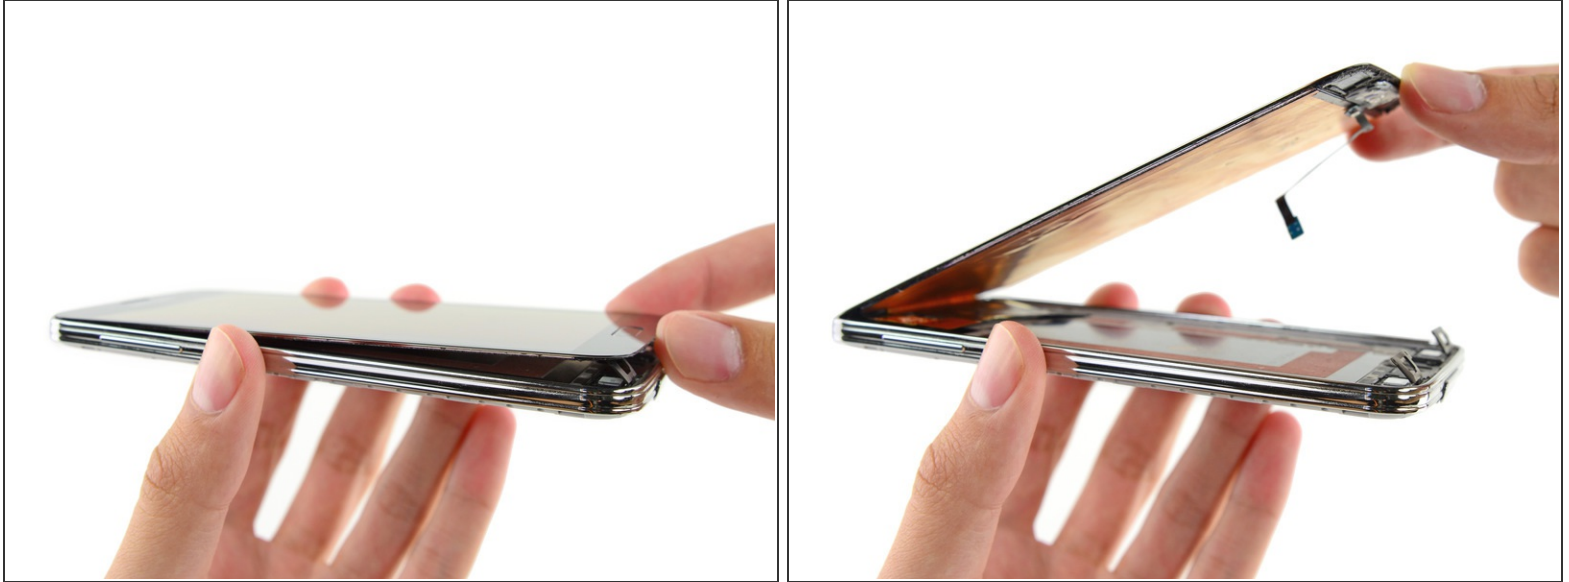


- Slightly lift, but do **not** remove, the home button end of display assembly.

⚠ Do not remove the front panel entirely. It is still attached by a connector.

⚠ If you are reusing the home button flex cable, be careful not to sever the cable from the home button. Adhesive can cause the cable to rip apart from the home button. While the home button will still work, the fingerprint scanner will not.

## Step 20

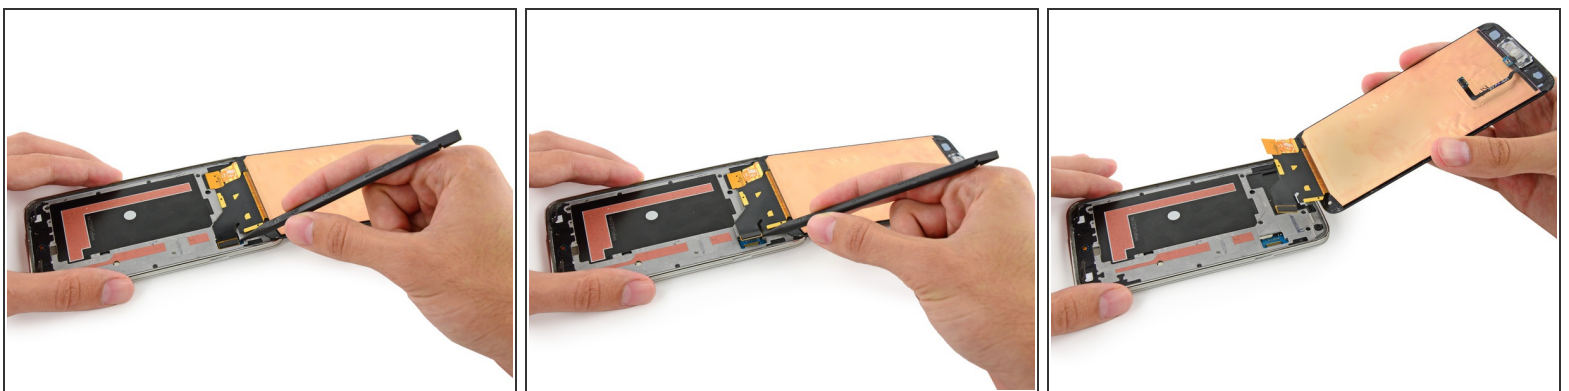

- Use the sharp tip of a spudger to lift the front panel assembly cable connector straight up off its socket on the motherboard.
- Safely remove the front panel assembly from phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-12 09:59:41 PM.